

## INSTALLATION INSTRUCTIONS

# **WALL SCONCE** WITH DUSK-TO-DAWN PHOTOCELL

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For questions or concerns about your purchase, please contact us!

INS-0034 REV A (HWK-0025, HWK-0106)

## **IMPORTANT**

Read all instructions before assembly. Installation is to be done by a qualified professional. For wet locations, junction between the mounting surface and luminaire must be sealed with caulking.

CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

#### **ALTERNATE FIXTURES**

These alternative shades follow the same installation instructions as the illustration shown below.




The Bantam Chestnut Wall Sconce



Wheeler™ Wilcox Bantam Wall Sconce

## **WIRING DIAGRAM**

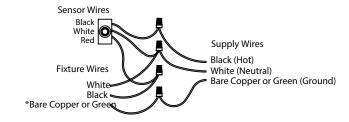

## **INSTRUCTIONS**

NOTE: When power supply is restored, light will stay on for about 60 seconds.

- 1. Disconnect power at the electrical panel before installation.
- 2. Mount crossbar (A) to the junction box (B) with two mounting screws (C). NOTE: Mounting screws (C) not included.
- 3. Thread nipple (D) into crossbar (A) just a few turns so that it stays in place.
- 4. Temporarily place fixture (E) against the wall with nipple (D) through center hole. Adjust length of nipple until only 1/4" protrudes out of the
- 5. fixture (E).
- 6. Remove fixture (E). Lock nipple (D) in place with nut (F) tight against crossbar (A).
- 7. Use wiring diagram and wire nuts (G) to wire photo sensor (H) and fixture (E).
- 8. Connect ground wire (I) to the crossbar (A).
- 9. Attach sensor (H) to fixture (E) (through sensor hole) using plastic nuts (J) and rubber seal (K) provided.

# WALL SCONCE WITH DUSK-TO-DAWN PHOTOCELL A. Crossbar **B. Junction Box** C. Mounting Screws\* D. Nipple E. Fixture F. Nut G. Wire Nuts\* H. Photo Sensor -Shade (Varies) I. Ground Wire Photo Sensor J. Plastic Nut K. Rubber Seal L. Lock-Up Cap **Fixture**

\*IMPORTANT: Mounting screws and wire nuts not included in hardware kit. Standard screw sizes include: 6-32, 8-32, 10-24 and 10-32.