

INSTALLATION INSTRUCTIONS

PLUG-IN WALL SCONCE

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For guestions or concerns about your purchase, please contact us!

INS-0053 REV A (HWK-0065)

IMPORTANT

Read all instructions before assembly. Installation is to be done by a qualified professional.


CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

INSTRUCTIONS

NOTE: Mount light within reach of outlet; use of extension cord is not recommended.

- 1. If necessary, temporarily set crossbar (A) against the wall to mark the two hole locations for mounting.
- 2. If necessary, drill two holes using 1/4" drill bit and insert plastic anchors (B).
- 3. Mount crossbar (A) to wall with the two screws (C) and plastic anchors (B).
- 4. Thread nipple (D) into crossbar (A) just a few turns so that it stays in place.
- 5. Temporarily place fixture (E) against the wall with nipple (D) through the center hole. Adjust length of nipple (D) until only 1/4" protrudes out of the fixture (E).
- 6. Remove fixture (E). Ensure cord is going through bottom hole of the fixture.
- 7. Lock nipple (D) in place with nut (F) tight against crossbar (A).
- 8. Secure fixture to wall using the lock-up cap (G).

PLUG-IN WALL SCONCE

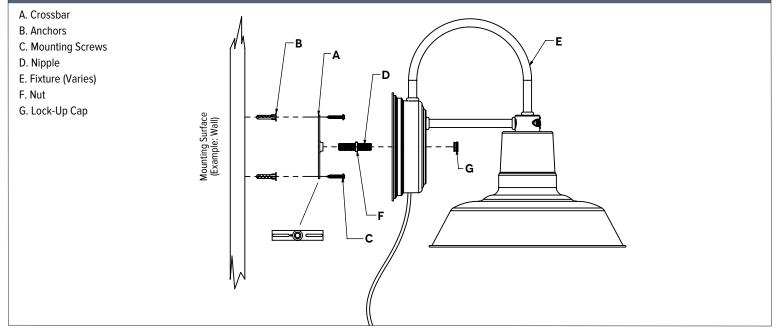

ALTERNATE FIXTURES

These alternative fixtures follow the same installation instructions as the illustration shown below.

