



INSTALLATION INSTRUCTIONS

CHAIN HUNG PENDANT

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For questions or concerns about your purchase, please contact us!

INS-0036 REV A (HWK-0039)

IMPORTANT

Read all instructions before assembly. Installation is to be done by a qualified professional. **For wet locations, junction between the mounting surface and luminaire must be sealed with caulking.**


CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

INSTRUCTIONS


1. Disconnect power at the electrical panel before installation.
2. Thread nut (A) and top loop (B) onto the nipple (C). Screw top loop (B) on all the way.
3. Thread nipple (C) into crossbar (D). Don't tighten anything into place yet.
4. Place socket gasket (E) onto socket (F). Feed socket cord through shade (G), coupler o-ring (H) and coupler (I).
5. Insert socket (F) into the shade (G) and screw on coupler (I) (rotate coupler counter-clockwise). **NOTE: Ensure coupler o-ring (H) is seated in coupler (I) groove.**
6. Feed cord through chain (J) and thread chain bottom loop (K) into the coupler (I).
7. Feed cord through adjustment ring (L), canopy (M), top loop (B) and nipple (C).
8. Crimp metal strain relief clamp (N) to cord above crossbar (D) with pliers.
9. Mount crossbar (D) to junction box (O) with two mounting screws (P). **NOTE: Mounting screws (P) not included.**
10. Use wire nuts (Q) to connect power supply to the black wire and neutral wire to the white wire. **NOTE: Wire nuts (Q) not included.**
11. Use wire nut (Q) to attach ground wire (R) to the junction box (O), green wire or bare wire and also to the crossbar (D). **NOTE: Wire nuts (Q) not included.**
12. Temporarily place canopy (M) flush with the ceiling and adjust the length of the nipple (C) until the top loop's (B) threads protrude roughly 1/4" through canopy (M). After nipple (C) length is adjusted, tighten nut (A) to lock into place.
13. Fit canopy (M) over top loop (B) and tighten adjustment ring (L) until canopy (M) is secure and flush against the ceiling.
14. Connect quick-link (S) to top loop (B) to finish installation.

ALTERNATE FIXTURES

Although the illustration below includes an RLM shade, these alternative fixtures follow the same installation instructions.

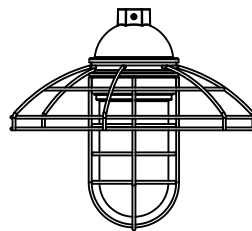


Blue Collar Fixture

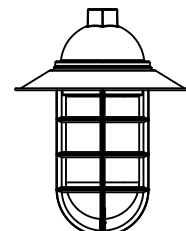


Guard & Glass Fixture

WIRING DIAGRAM

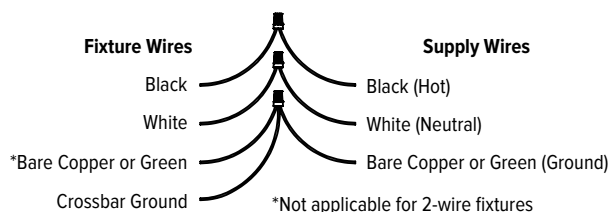

CHAIN HUNG PENDANT

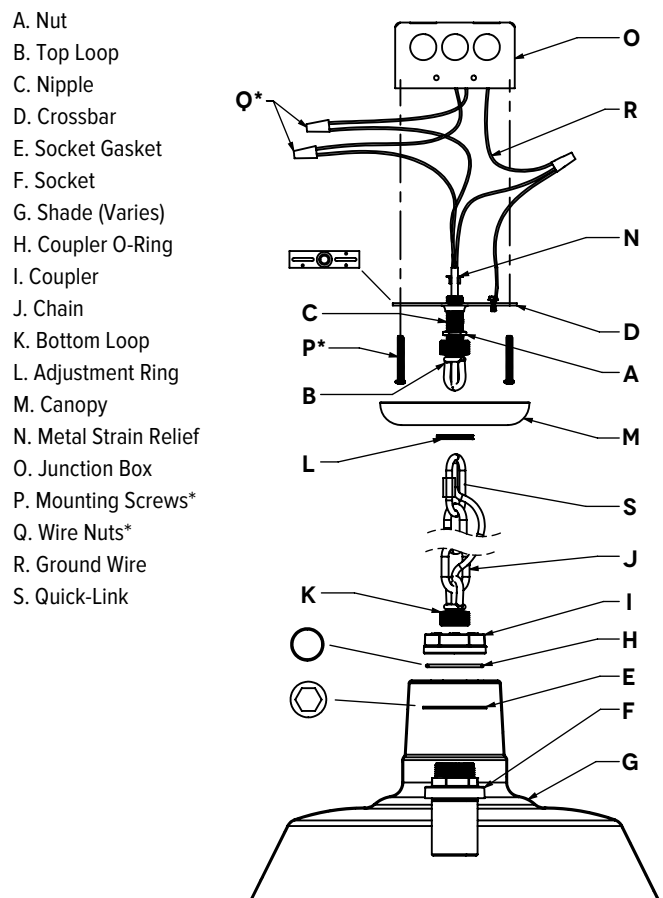

***IMPORTANT:** Mounting screws and wire nuts not included in hardware kit. Standard screw sizes include: 6-32, 8-32, 10-24 and 10-32.