



INSTALLATION INSTRUCTIONS


BOWIE/FARGO/DOWNTOWN MINIMALIST WALL SCONCE

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For questions or concerns about your purchase, please contact us!


INS-0010 REV O (HWK-0010)

ALTERNATE FIXTURES

Although the illustration below includes an RLM shade, these alternative fixtures follow the same installation instructions.

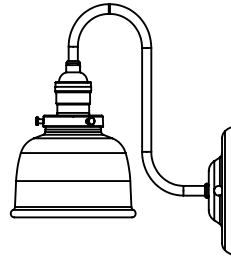

Fargo Sconce

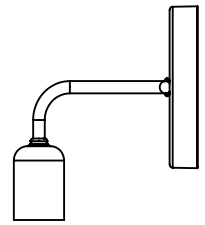


Downtown Minimalist Sconce

IMPORTANT

Read all instructions before assembly. Installation is to be done by a qualified professional. **For wet locations, junction between the mounting surface and luminaire must be sealed with caulking.**

CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

WIRING DIAGRAM

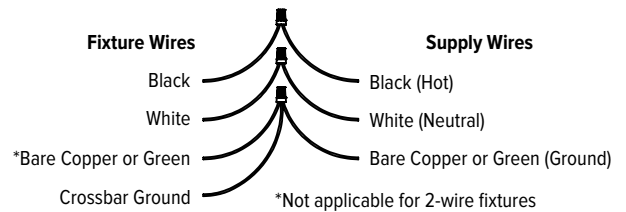


INSTRUCTIONS

1. Disconnect power at the electrical panel before installation.
2. Thread two screws (A) into the swivel crossbar (B) holes that align with the holes in the fixture (C).
3. Mount the crossbar (B) to junction box (D) with two screws (E). **NOTE: Mounting screws (E) not included.**
4. Use wire nuts (F) to connect power supply to the black wire and neutral wire to the white wire. **NOTE: Wire nuts (F) not included.**
5. Attach ground wire (G) to the junction box (D), green wire or bare wire.
6. Align fixture with the two protruding screws (A) and thread on lock-up caps (H) until the fixture (C) is flush and secure against the wall.

BOWIE/FARGO/DOWNTOWN MINIMALIST WALL SCONCE

- A. Fixture Screws
- B. Crossbar
- C. Fixture (Varies)
- D. Junction Box
- E. Mounting Screws*
- F. Wire Nuts*
- G. Ground Wire
- H. Lock-Up Cap

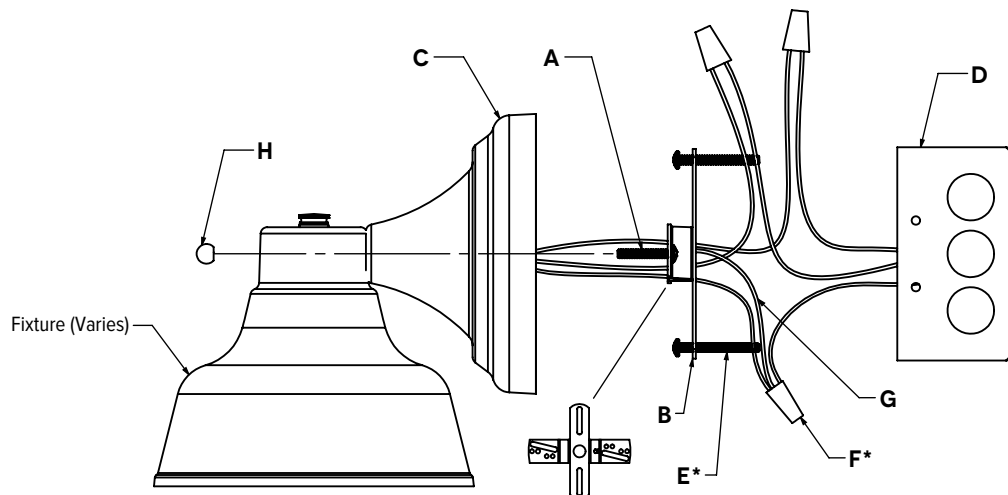

***IMPORTANT:** Mounting screws and wire nuts not included in hardware kit. Standard screw sizes include: 6-32, 8-32, 10-24 and 10-32.