



INSTALLATION INSTRUCTIONS

CORD HUNG FIXTURE (2-HOLE CANOPY)

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For questions or concerns about your purchase, please contact us!

INS-0011 REV O (HWK-0007, HWK-0064)

IMPORTANT

Read all instructions before assembly. Installation is to be done by a qualified professional. **For wet locations, junction between the mounting surface and luminaire must be sealed with caulking.**


CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

INSTRUCTIONS

1. Disconnect power at the electrical panel before installation.
2. Attach the nipple (A) to the canopy (B) with the bushing (C), lock washer (D) and nut (E).
3. Feed cord (F) from uno-socket (G) through bushing (C), canopy (B), nipple (A) and adapter bracket (H) (if necessary).
4. Trim electrical wires (F) to length desired leaving 6" extra for canopy (B) and knot (I).
5. Tie a knot (I) in the cord above the adapter bracket (H) for strain relief.
6. Crimp metal strain relief (J) to the cord (F), just below the knot (I) with pliers.
7. Mount adapter bracket (H) to junction box (K) (if necessary) with two mounting screws (L). **NOTE: Mounting screws (L) not included.**
8. **A. 2-WIRE CORD:** Use wire nuts (M) to connect power supply to the solid wire and neutral wire to the striped wire. **NOTE: Wire nuts (M) not included.**
B. 3-WIRE CORD: Use wire nuts (M) to connect power supply to the black wire and neutral wire to the white wire. **NOTE: Wire nuts (M) not included.**
9. Attach ground wire (N) to the junction box (K), green wire or bare wire.
10. Mount canopy (B) to the adapter bracket (H) with the two screws provided (O).
11. Insert shade (P) into uno-socket (G) and secure with the 3 uno-socket screws (Q).


ALTERNATE FIXTURES

These alternative shades follow the same installation instructions as the illustration shown below.

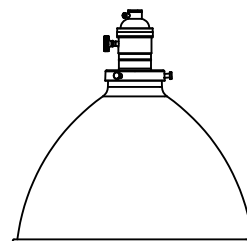


The Kao Gladstone
Pendant

WIRING DIAGRAM

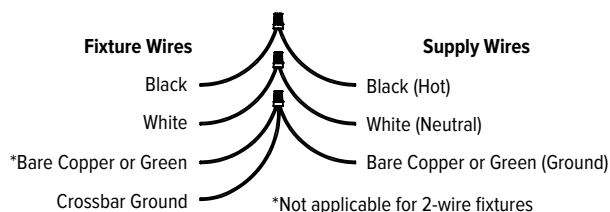

CORD HUNG FIXTURE (2-HOLE CANOPY)

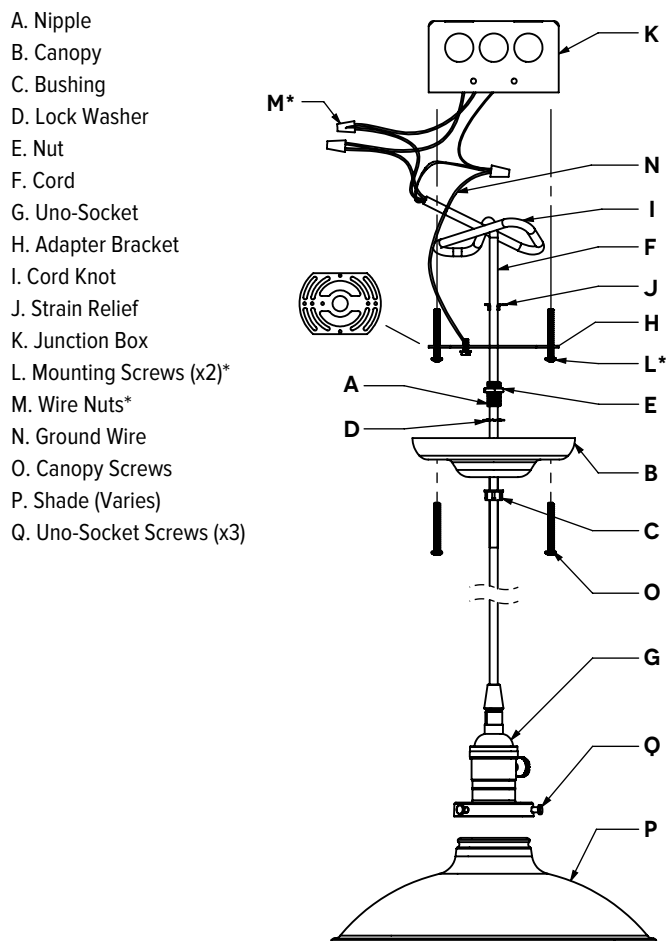

***IMPORTANT:** Mounting screws and wire nuts not included in hardware kit. Standard screw sizes include: 6-32, 8-32, 10-24 and 10-32.